

Modo de Serviço de TV Toshiba

Chassi: TV-2997 - Modo S

RCUT	20
HIT	5 A
VPOS	04
HPOS	0E
WBAN	20
SPEC	16
STRF	1 F
STVC	17
ATT	48
SAVC	1 B
SCNT	00
BRTC	90
BDRV	80
GDRV	80
BCUT	20
GCUT	20

NO CONTROLE REMOTO

Teclas

1	RCUT	2Q
2	GCUT	2Q
3	BCUT	2Q
4	SCNT	Q7
5	COLC	78
6	TNTC	43
7	-	-
8	-	-
9	VOLTA NO MODO S	
10	FECHA VERTICAL	